
I.C. BRINDLE & Co. Ltd



Rail Mounting

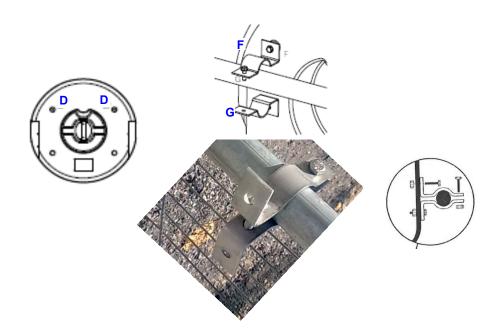

Rail Mounting

- 1. Temporarily remove the bolts from all three brackets
- 2. Using an 8mm bit (not supplied) drill through the two recesses (D & D). Then, using two of the shorter bolts, fix one half of a bracket (F) at each hole
- 3. The housing will now hang on the chosen top rail enabling accurate positioning of the lower halves of the brackets. Using an 8mm bit drill the housing to accept the lower part of the brackets
- 4. Using the short bolts fix the bottom section of the brackets to the housing
- 5. Use the long bolts to secure together the two bracket halves (G)
- 6. To secure the bottom bracket, rest the top half over a lower rail and mark the hole position on the housing. Then drill through using an 8mm bit.
- 7. Position and fit the lower half of the bottom bracket using the short and long bolts as described above

Address: 15 Moor Road Broadstone Dorset BH18 8AZ

Telephone: +44 (0)1202 657814 Facsimile: +44 (0)1202 693005

Email: info@icbrindle.com Websites: icbrindle.com rescueandrecovery.co.uk